


APCO CRF-100, 100SA, 100SR RUBBER FLAPPER SWING CHECK VALVES

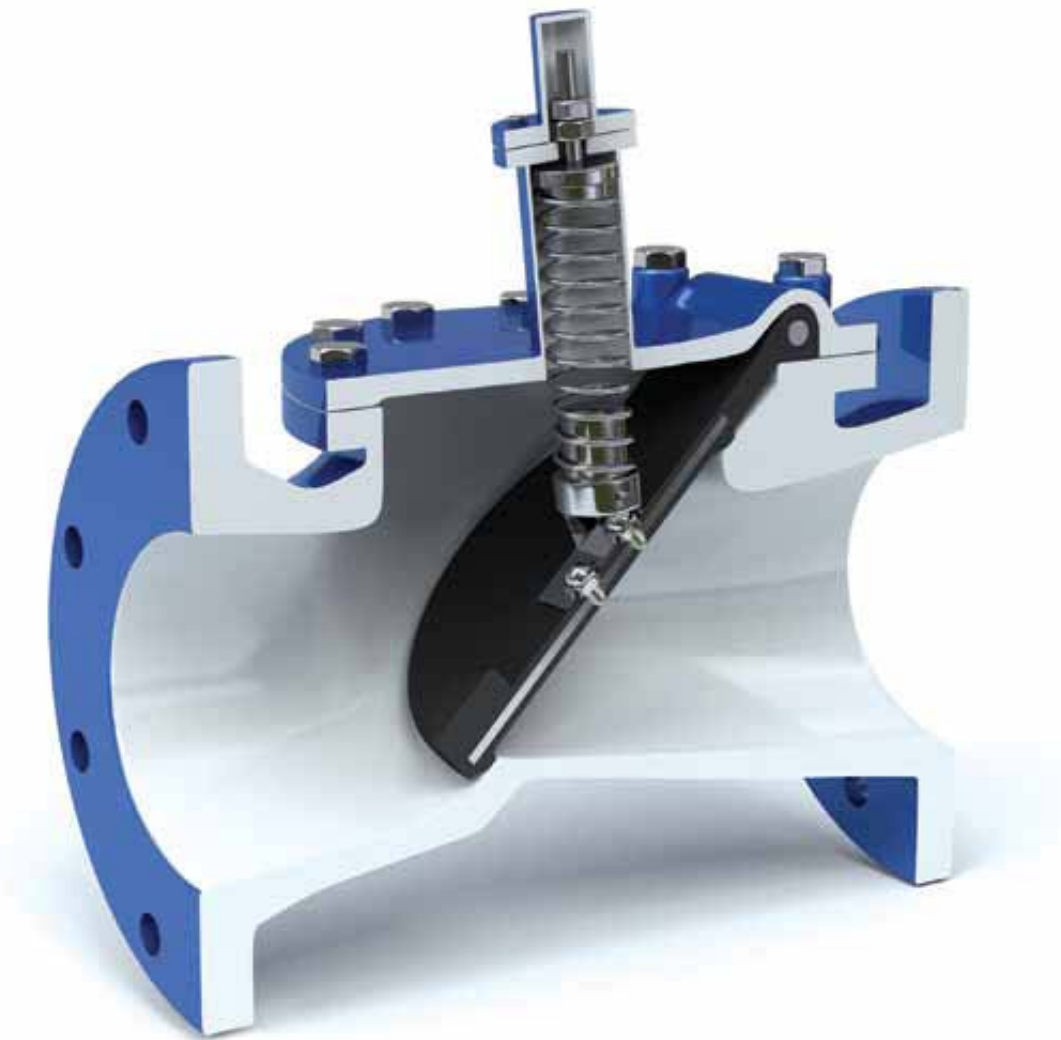

Instruction **D12007**
May 2017

Instructions

These instructions are for use by personnel who are responsible for the installation, operation and maintenance of DeZURIK valves, actuators or accessories.

Safety Messages

All safety messages in the instructions are identified by a general warning sign and the signal word CAUTION, WARNING or DANGER. These messages indicate procedures to avoid injury or death.

Safety label(s) on the product indicate hazards that can cause injury or death. If a safety label becomes difficult to see or read, or if a label has been removed, please contact DeZURIK for replacement label(s).

WARNING

Personnel involved in the installation or maintenance of valves should be constantly alert to potential emission of pipeline material and take appropriate safety precautions. Always wear suitable protection when dealing with hazardous pipeline materials. Handle valves which have been removed from service with suitable protection for any potential pipeline material in the valve.

Inspection

Your DeZURIK product has been packaged to provide protection during shipment; however, items can be damaged in transport. Carefully inspect the unit for damage upon arrival and file a claim with the carrier if damage is apparent.

Parts

Replaceable wear parts are listed on the assembly drawing. These parts can be stocked to minimize downtime. Order parts from your local DeZURIK sales representative or directly from DeZURIK. When ordering parts please provide the following information:

If the valve has a data plate: please include the 7-digit part number with either 4-digit revision number (example: 9999999R000) or 8-digit serial number (example: S1900001) whichever is applicable. The data plate will be attached to the valve assembly. Also, include the part name, the assembly drawing number, the balloon number and the quantity stated on the assembly drawing.

If there isn't any data plate visible on the valve: please include valve model number, part name, and item number from the assembly drawing. You may contact your local DeZURIK Representative to help you identify your valve.

DeZURIK Service

DeZURIK service personnel are available to maintain and repair all DeZURIK products. DeZURIK also offers customized training programs and consultation services. For more information, contact your local DeZURIK sales representative or visit our website at DeZURIK.com.

Table of Contents

Description - - - - -	4
Handling and Storage - - - - -	4
Installation - - - - -	4
Fusion/Powder Coated Valves - - - - -	4
Maintenance - - - - -	5
Operation - - - - -	6
<i>Start-up Procedure (Bottom Buffer)</i> - - - - -	6
Oil Filling Procedure - - - - -	8
Maintenance (Bottom Buffer) - - - - -	8
Adjustment of Flow Control Valve - - - - -	8
Operation of Internal Cushion - - - - -	9
Spring Return Attachment Option - - - - -	10
<i>Adjustment of Closing Speed (to minimize slam)</i> - - - - -	10
Maintenance (Spring Return) - - - - -	10
<i>Assembly Procedure</i> - - - - -	11
Drawings - - - - -	11
Troubleshooting - - - - -	13

DeZURIK

APCO CRF Rubber Flapper Swing Check Valves

Description

A rubber flapper swing check valve consists of a valve body, a cover, and a flapper that is connected to the body and cover. The flapper swings away from the valve seat to allow flow in the forward direction, and returns to the valve seat when upstream flow is stopped to prevent backflow. They can be equipped with optional adjustable spring assist, spring return or bottom mounted buffer attachments.

Handling and Storage

Lifting the valve improperly may damage it. Do not fasten lifting devices to the actuator or through the seat opening in the body. Lift the valve with slings, chains or cables fastened around the valve body, or fastened to bolts or rods through bolt holes in the flanges.

If installation will be delayed, place valve indoors in secure, weather tight storage. If temporary outside storage is unavoidable, make sure a vermin proof rain cover (water shedding tarp, etc.) is secured around/over the equipment to keep off rain and mud. Skid and set the assembly on a flat, solid, and well drained surface for protection from ground moisture, runoff and pooled rain water.

Installation

The APCO CRF Rubber Flapper Swing Check Valve may be installed in either horizontal or vertical position (with the flow upward). The embossed flow arrow on the valve body must be pointing in the direction of flow. Valves with Bottom Mounted Buffer, the oil tanks **(27)** and **(32)** of **Figure 2** must always be in upright position. Unless otherwise specified, the valves are shipped for horizontal installation.

1. Before installation, remove foreign material such as weld spatter, oil, grease, and dirt from the pipeline.
2. Prepare pipe ends and install valves in accordance with the pipe manufacture's instructions for the joint used.



CAUTION!

Do not deflect the pipe-valve joint. Minimize bending stresses in the valve end connection with pipe loading.

If excessive seat leakage occurs during start-up, recheck the installation and eliminate any distortion to the valve body.

- Ensure the valve and pipeline flanges are concentric to ensure proper flange sealing and seat leakage control.
- Tighten the flange bolts or studs in a crisscross pattern and minimum of four stages.

Fusion/Powder Coated Valves



CAUTION!

Valves with fusion/powder coated exterior paint require flat washers to be installed under the flange nuts when installing the valve to the pipeline flange to prevent the paint from cracking or chipping.

Maintenance


The CRF Rubber Flapper Swing Check Valve does not require routine maintenance, but should be included as part of the normal facility equipment inspections for any malfunction while under normal usage conditions. An inspection can be quickly performed as follows:



WARNING!

Servicing the valve while the pipeline is under pressure can cause personal injury or equipment damage. Relieve pipeline pressure before servicing the valve.

1. Relieve the pressure in the pipeline.
2. Isolate the Rubber Flapper Check Valve from system **before loosening** the Cover Bolts (4) to remove the Cover (2).
3. Loosen each cover bolt only three full turns, then tap the side of the cover with a mallet to separate only the valve cover from the Cover Gasket (3), this will relieve any pressure in the valve.
4. Continue loosening to remove all cover bolts and lift off the cover. After removing the cover, the Flapper (10) will be fully exposed and freely removed. At this point, the flapper and body surfaces should be examined for wear.

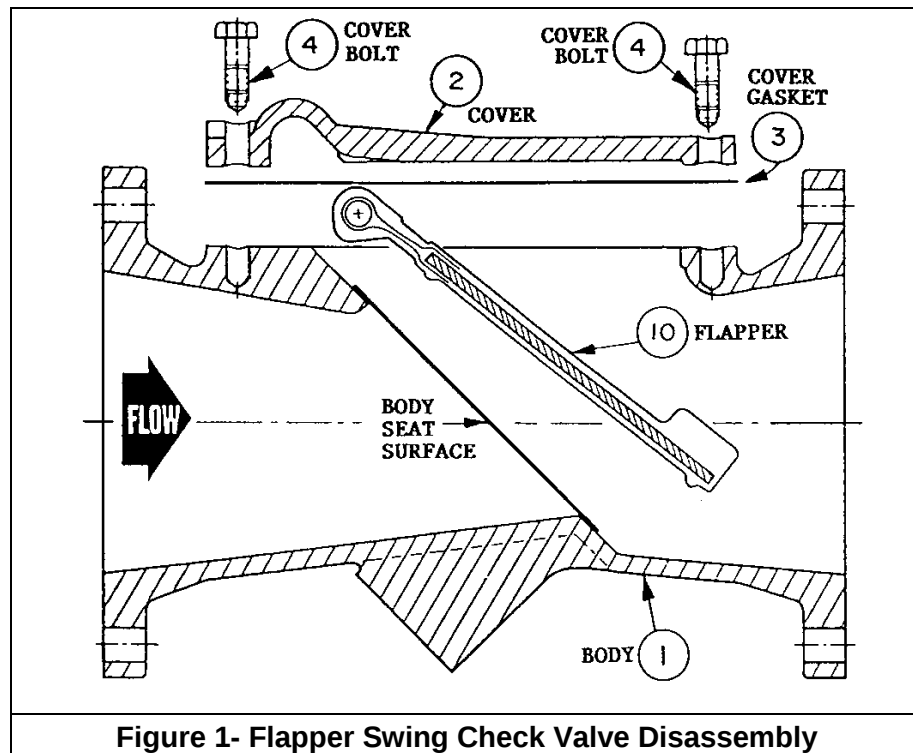

5. To reassemble, replace Cover Gasket (3), often the same cover gasket can be reused several times.
6. Replace flapper and be sure it rests flat and centered against the body seat surfaces.

Maintenance *(Continued)*

7. Carefully replace cover over the flapper so as not to move the flapper from its seating position, then replace cover bolts and tighten lightly while alternating the tightening of each cover bolt 180° apart to prevent tilting the cover.
8. Slowly open discharge isolation valve to pressurize rubber flapper check valve and observe the cover gasket (3) joint is not leaking.

Note: Cover Gasket is not used on rubber lined valves.

Operation

The flow from the pump opens the flapper. When the pump is shut off, backflow pressure (and Spring Assist or Spring Return if equipped) pushes the flapper to close against the body seat surface. If the valve is equipped with a Bottom Mounted Buffer, as the disc is closing, the flapper closes freely for the majority of its travel from full open to close. When the flapper is about 90% closed, it comes in contact with the Buffer Rod (33) which controls the speed of closing for the last 10% of flapper travel. See Figure 2. This type of control provides for proper adjustment to suit the best performance for the installation, and can minimize pipeline surge and water hammer.

The bottom mounted buffer assembly (figure 2) utilizes two air over oil tanks, an accumulator (32) and an oil reservoir (27). The accumulator is pressurized to allow the buffer to fully extend by counteracting the pressure in the pipeline. The oil reservoir is vented to atmosphere and its main function is to lubricate the piston and the cylinder.

Start-up Procedure *(Bottom Mounted Buffer)*

1. Remove the pipe plug from the top of the oil reservoir and replace it with the air breather cap that is supplied with the valve (it is normally taped to the tank or oil piping).
2. Check for proper oil levels. Make sure both oil tanks are in vertical position.
 - a. **Hydro-pneumatic Tank Accumulator (32)** - Release air pressure and remove pipe plug on the side of the tank. Oil should be visible in the elbow, which is the oil fill level. Add if necessary. See "Oil Filling Procedure."
 - b. **Oil Reservoir (27)** - The oil should be checked when the valve is **open**. Oil should be visible in the elbow, which is the oil fill level. Add if necessary. See "Oil Filling Procedure."
3. Make initial adjustments to the following speed controls:
 - Flow Control Valve **(41)** = 3 turns open. See "Adjustment of Flow Control Valve"
 - Internal Cushion Needle Valve = 1-1/2 turns open. See "Operation of Internal Cushion."
 - Fully open Flow Control Valve (41A) that is connected to the oil reservoir.
4. Pressurize Hydro-pneumatic tank to a pressure according to the formula:

$$\text{Tank pressure} = \frac{\text{Line pressure}}{4} + 5 \text{ psi}$$

DeZURIK

APCO CRF Rubber Flapper Swing Check Valves

Operation (Continued)


- Start pump. While valve is opening, visually ascertain that buffer rod fully extends into the valve body. If not, pressurize hydro-pneumatic tank until it does. The chart below shows the maximum stroke length of the buffer rod for the following sizes:

Valve size	4"	6"	8"	10"	12"	14"	16"	18"	20"	24"	30"	36"	42"	48"
Buffer Rod Stroke	1-1/2			1-5/8		1-3/4					Contact DeZURIK			

- Shut-off pump and observe rate of closing. Based on this initial run, make necessary adjustments to the flow control valve and/or the internal cushion needle valve until satisfactory closing is achieved.

A split collar is mounted on the buffer rod to lock it in place when it is necessary to disconnect the cylinder for repairs while the pump is running. In very rare cases however, it can be used to shorten the buffer rod stroke when the system demands higher percentage of free fall closing of the flapper.

The Rubber Flapper Check Valve with bottom mounted buffer has two controlling stages in the closing cycle. The flow control valve controls the first stage of flapper closure and the secondary control is the internal cushion needle valve which controls the remaining 20% of the buffer stroke.

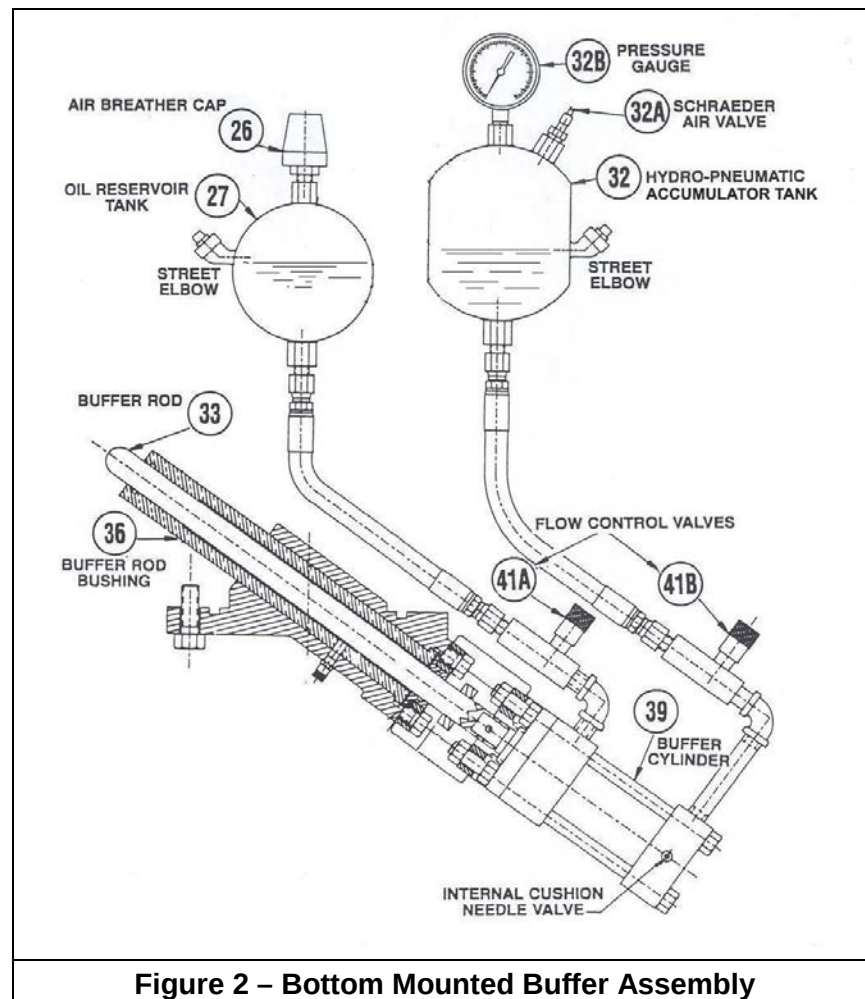

Oil Filling Procedure

Recommended Oils: Motor oil SAE 20, Mobil DTE 24, Castrol Hyspin AW 32.

Step 1: Hydro-pneumatic accumulator tank (32)

1. Shut down pump.
2. Release pressure of hydro-pneumatic tank and remove pipe plug located on the side of the tank and also either the Pressure Gauge **(32B)** or Air Valve **(32A)**.
3. Fully open Flow Control Valve **(41B)** and slowly fill cylinder with oil until it spills out of the side port. This is the oil fill level.
4. Replace both fittings and pressurize tank according to the formula;

$$\text{Tank pressure} = \frac{\text{Line pressure}}{4} + 5 \text{ psi}$$

5. Set flow control valve three turns counterclockwise from fully closed position.
6. Start pump and observe if buffer rod extends. If not, while valve is still open add more pressure in increments of 5 psi until rod fully extends.

Step 2: Oil Reservoir (27)

1. Start pump.
2. Remove side plug and Breather Cap **(26)** and slowly fill with oil until it spills out of the side port. This is the oil fill level.
3. Replace both fittings.
4. Shut down pump.

Maintenance (Bottom Mounted Buffer)

The Rubber Flapper Check Valve is shipped from the factory fully lubricated and oil tanks filled with oil to their proper levels ready for installation. It requires a very minimal amount of preventive maintenance.

Special care should be taken to the exposed area of the buffer rod when painting the valve. It should be fully masked to prevent even a small amount of paint to from getting on the buffer rod which could damage the cylinder rod seal and cause the cylinder to leak.

A periodic (approximately 6 months) lubrication of the exposed area of the buffer rod is required to keep the Rubber Flapper Check Valve in good operating condition. Recommended Grease: White water proof, FDA approved LUBRIPLATE or equal.

Adjustment of Flow Control Valve

The Flow Control Valve has a micrometer type adjustment, which incorporates a color coded reference scale to simplify setting, resetting and adjusting.

A lock nut is provided for locking the valve setting. Turning the knob clockwise closes the valve and turning counterclockwise opens the valve and increases rate of closure of the Rubber Flapper Check Valve. See Figure 3.

Adjustment of Flow Control Valve *(Continued)*

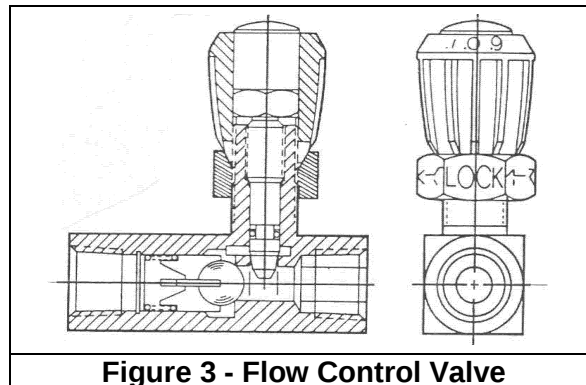



Figure 3 - Flow Control Valve

Operation of Internal Cushion

As illustrated below, the cushioning of a hydraulic cylinder stroke is obtained by trapping the exhaust fluid as the piston assembly nears the end of its stroke. In Figure 4, as the Cushion Plunger (1) enters Cushion Cavity (2), the exhaust fluid is almost completely trapped by the Ball Check (3) and Adjusting Screw (4) creating a back pressure against piston assembly. The back pressure cushions and slows the final part of the piston stroke thus, reducing the high impact hammering of the Piston Assembly against the Cylinder Cap.

Turning the Adjusting Screw to allow more or less fluid to escape regulates the degree of cushioning as desired.

In Figure 5, when pressurized fluid enters the Cylinder Cap End to strike the Piston Assembly in the opposite direction, the pressure fluid moves the Ball Check (3) off its seat, opening the passage for more fluid to act against the Piston, thus speeding its start-up movement as the Cushion Plunger (1) is immediately forced out of its cavity (2).

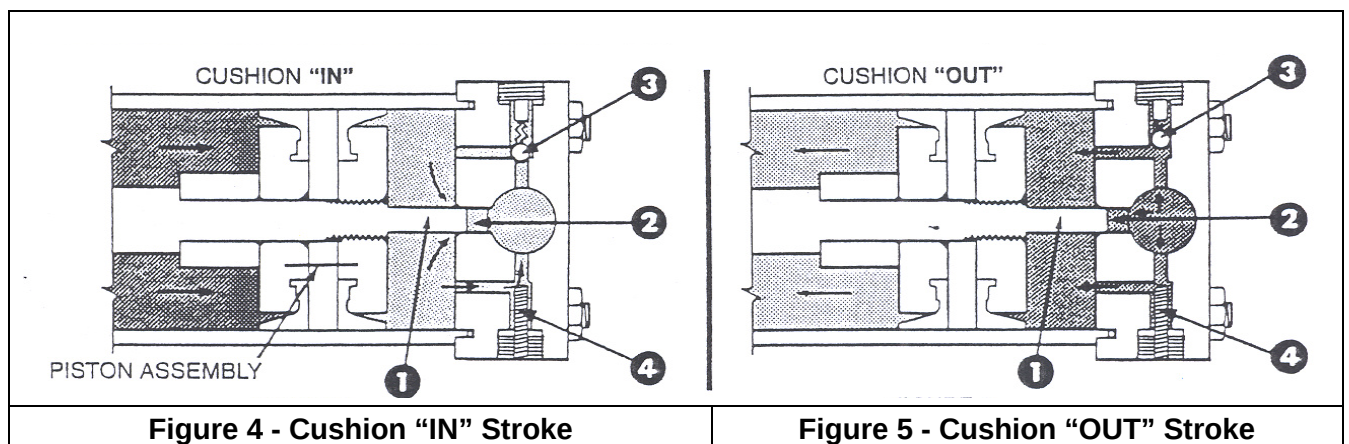

Spring Return Attachment Option

The Series 100SR is designed to minimize or eliminate slam in high head applications where rapid flow reversal causes standard swing check valves to slam. This valve has a 35° disc stroke as compared to conventional style swing check valves, which typically have between 80° to 90° disc travel. Adding a spring return feature causes the disc to speed up or accelerate valve closure. Having the valve closed before reverse flow occurs can in many instances drastically reduce or even eliminate valve slam.

Note: Pump does not require shutdown or to be depressurized to make spring adjustments.

Adjustment of Closing Speed (to minimize slam)

To Increase Closing Speed:

Remove Spring Cover (54), See Figure 6.

1. Loosen Adjusting Screw Lock Nut (58), and then turn Spring Adjusting Screw (57) clockwise. This will increase the compressive load on the spring (63), as well as apply more pressure on the flapper to cause it to close faster and reduce slam.
2. Lock the Adjusting Screw with the Lock Nut when desired setting has been reached.

To Decrease Closing Speed: (Minimize head loss and increase flow rate)

1. Remove Spring Cover (54), see figure 6.
2. Loosen Adjusting Screw Lock Nut (58), and then turn Spring Adjusting Screw (57) counterclockwise. This will decrease the pressure of the flapper-hence, minimize head loss and increase flow rate.
3. Lock the Adjusting Screw with the Lock Nut when desired setting has been reached.

Maintenance (Spring Return)

There are very few moving parts in this valve – a spring adjusting mechanism where all components are made of stainless steel, and a rubber flapper. This valve requires virtually little or no maintenance.

For periodic inspection of the rubber flapper and the body seat surface, the following procedures may be taken: Refer to Figure 6 for details and parts.



WARNING!

Servicing the valve while the pipeline is under pressure can cause personal injury or equipment damage. Relieve pipeline pressure before servicing the valve.

1. Relieve the pressure in the pipeline.
2. Isolate the Rubber Flapper Check Valve from system **before loosening** the Cover Bolts (4) to remove the Cover (2).
3. Loosen each cover bolt only three full turns, then tap the side of the cover with a mallet to separate only the valve cover from the Cover Gasket (3), this will relieve any pressure in the valve.
4. Continue loosening to remove all cover bolts and lift off the cover. After removing the cover, the Flapper (10) will be fully exposed and freely removed. At this point, the flapper and body surfaces should be examined for wear.

Maintenance-Spring Return *(Continued)***Disassembly Procedure:**

1. Isolate the Rubber Flapper Valve from the system, and then relieve pressure on the discharge side of the valve by loosening the cover bolts (4) and (5) approximately three full turns.
2. Completely unscrew all cover bolts and lift off Cover (2) including the spring mechanism assembly. This will disconnect the Spring (63) from the Lower Spring Guide (51).
3. Remove Rubber Flapper (10) and check for cracks and tears and inspect body seat surface for wear.

Assembly Procedure:

1. Replace Cover Gasket (3) if necessary.
2. Replace Rubber Flapper (10) and make certain it rests flat and centered against the body seat surfaces.
3. Install Spring (63) over Lower Spring Guide (51).
4. Carefully replace Cover (2) over Flapper (10) making sure not to move Flapper from its seating position.
5. Replace cover bolts (4) and (5) and tighten alternately opposite each other in rotation.

DeZURIK

APCO CRF Rubber Flapper Swing Check Valves

Drawings

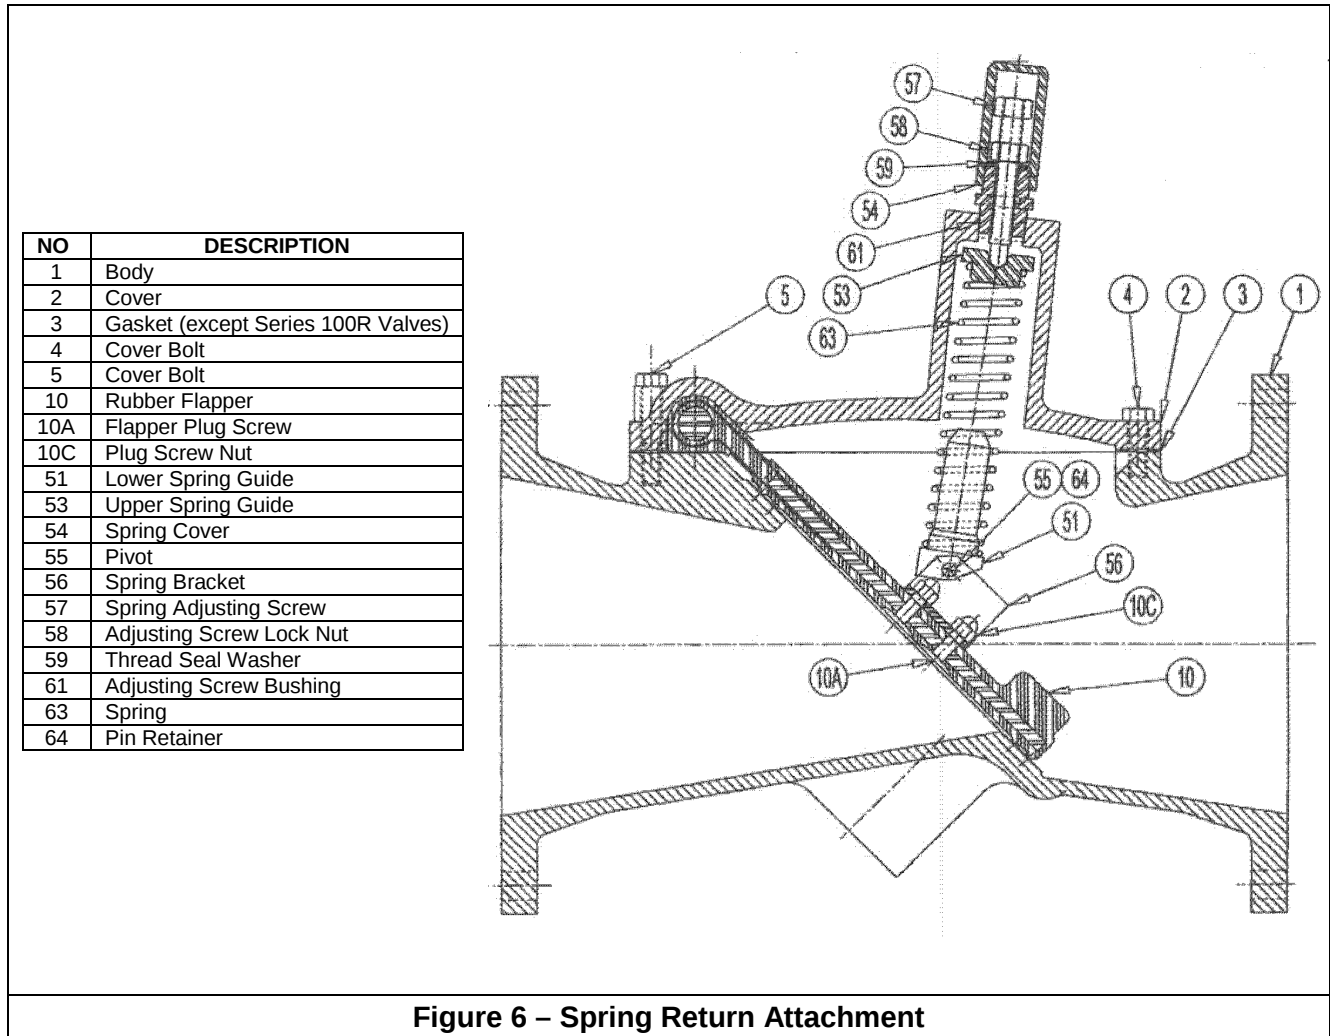


Figure 6 – Spring Return Attachment

DeZURIK

APCO CRF Rubber Flapper Swing Check Valves

Troubleshooting

Condition	Possible Cause	Corrective Action
Cover leaks.	Cover gasket is damaged.	Replace cover gasket.
Valve leaks excessively from one side of the flapper to the other.	Foreign matter caught between flapper and seat.	Fully open valve to remove object.
	Flapper is worn or damaged.	Replace flapper.
Valve leaks at flange joint.	Loose flange bolting.	Tighten flange bolting.
	Blown flange gasket.	Replace flange gasket.
	Miss-alignment or damage to field piping and supports.	Adjust miss-alignment or repair piping or supports.
	Damaged flange face/s or improper flange connections.	Repair flange, replace valve body or adjust flange connections.
Valve does not fully close.	Object is wedged between seat and disc.	Fully open valve to remove object.

Limited Warranty

DeZURIK, Inc. ("Seller") manufactured products, auxiliaries and parts thereof that we manufacture for a period of twenty-four (24) months from date of shipment from Seller's factory, are warranted to the original purchaser only against defective workmanship and material, but only if properly stored, installed, operated, and serviced in accordance with Seller's recommendations and instructions.

For items proven to be defective within the warranty period, your exclusive remedy under this limited warranty is repair or replacement of the defective item, at Seller's option, FCA Incoterms 2020 Seller's facility with removal, transportation, and installation at your cost.

Products or parts manufactured by others but furnished by Seller are not covered by this limited warranty. Seller may provide repair or replacement for other's products or parts only to the extent provided in and honored by the original manufacturer's warranty to Seller, in each case subject to the limitations contained in the original manufacturer's warranty.

No claim for transportation, labor, or special or consequential damages or any other loss, cost or damage is being provided in this limited warranty. You shall be solely responsible for determining suitability for use and in no event shall Seller be liable in this respect.

This limited warranty does not warrant that any Seller product or part is resistant to corrosion, erosion, abrasion or other sources of failure, nor does Seller warrant a minimum length of service.

Your failure to give written notice to us of any alleged defect under this warranty within twenty (20) days of its discovery, or attempts by someone other than Seller or its authorized representatives to remedy the alleged defects therein, or failure to return product or parts for repair or replacement as herein provided, or failure to store, install, or operate said products and parts according to the recommendations and instructions furnished by Seller shall be a waiver by you of all rights under this limited warranty.

This limited warranty is voided by any misuse, modification, abuse or alteration of Seller's product or part, accident, fire, flood or other Act of God, or your failure to pay entire contract price when due.

The foregoing limited warranty shall be null and void if, after shipment from our factory, the item is modified in any way or a component of another manufacturer, such as but not limited to; an actuator is attached to the item by anyone other than a Seller factory authorized service personnel.

All orders accepted shall be deemed accepted subject to this limited warranty, which shall be exclusive of any other or previous warranty, and this shall be the only effective guarantee or warranty binding on Seller, despite anything to the contrary contained in the purchase order or represented by any agent or employee of Seller in writing or otherwise, notwithstanding, including but not limited to implied warranties.

THE FOREGOING REPAIR AND REPLACEMENT LIMITED WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES, OBLIGATIONS AND LIABILITIES, INCLUDING, BUT NOT LIMITED TO, ALL WARRANTIES OF FITNESS FOR A PARTICULAR PURPOSE OR OF MERCHANTABILITY OR OTHERWISE, EXPRESSED OR IMPLIED IN FACT OR BY LAW, AND STATE SELLER'S ENTIRE AND EXCLUSIVE LIABILITY AND YOUR EXCLUSIVE REMEDY FOR ANY CLAIM IN CONNECTION WITH THE SALE AND FURNISHING OF SERVICES, GOODS OR PARTS, THEIR DESIGN, SUITABILITY FOR USE, INSTALLATION OR OPERATIONS. NEITHER ANY PERFORMANCE OR OTHER CONDUCT, NOR ANY ORAL OR WRITTEN INFORMATION, STATEMENT, OR ADVICE PREPARED BY SELLER OR ANY OF OUR EMPLOYEES OR AGENTS WILL CREATE A WARRANTY, OR IN ANY WAY INCREASE THE SCOPE OR DURATION OF THE LIMITED WARRANTY.

Disclaimer

Metric fasteners should not be used with ASME Class 150/300 bolt holes and flange bolt patterns. If you use metric fasteners with ASME Class 150/300 bolt holes and flange bolt patterns, it may lead to product failure, injury, and loss of life. DeZURIK Inc. disclaims all liability associated with the use of metric fasteners with ASME Class 150/300 bolt holes and flange patterns, including but not limited to personal injury, loss of life, loss of product, production time, equipment, property damage, lost profits, consequential damages of any kind and environment damage and/or cleanup. Use of metric fasteners with ASME Class 150/300 bolt holes and flange bolt patterns is a misuse that voids all warranties and contractual assurances. If you use metric fasteners with ASME Class 150/300 bolt holes and flange bolt patterns, you do so at your sole risk and any liability associated with such use shall not be the responsibility of DeZURIK, Inc. In addition to the foregoing, DeZURIK's Manufacturer's Conditions apply.

Limitation of Liability

IN NO EVENT SHALL SELLER BE LIABLE FOR ANY DIRECT, INDIRECT, SPECIAL, PUNITIVE, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO; DAMAGE TO OR LOSS OF OTHER PROPERTY OR EQUIPMENT, BUSINESS INTERRUPTION, COST OF SUBSTITUTE PRODUCTS, LOSS OF TIME, LOSS OF PROFITS OR REVENUE, COST OF CAPITAL, LOSS OF USE, OR DIMINUTION IN VALUE) WHATSOEVER, AND SELLER'S LIABILITY, UNDER NO CIRCUMSTANCES, WILL EXCEED THE CONTRACT PRICE FOR THE GOODS AND/OR SERVICES FOR WHICH LIABILITY IS CLAIMED. ANY ACTION FOR BREACH OF CONTRACT BY YOU, OTHER THAN RIGHTS RESPECTING OUR LIMITED WARRANTY DESCRIBED ABOVE, MUST BE COMMENCED WITHIN 12 MONTHS AFTER THE DATE OF SALE.

Sales and Service

For information about our worldwide locations, approvals, certifications and local representative:

Web site: www.dezurik.com E-Mail: info@dezurik.com



250 Riverside Ave. N., Sartell, MN 56377 • Phone: 320-259-2000 • Fax: 320-259-2227

DeZURIK, Inc. reserves the right to incorporate our latest design and material changes without notice or obligation.

Design features, materials of construction and dimensional data, as described in this manual, are provided for your information only and should not be relied upon unless confirmed in writing by DeZURIK, Inc. Certified drawings are available upon request.